

**Safety instructions****UK**

Remember several things when using the Rambler. It has been designed for use by adults, to carry children and/or baggage during recreational rambles. The Rambler is not a toy, and should not be pulled by either vehicles or animals. If the wagon is used in this way, dangerous situations may occur for which the supplier does not accept any liability.

Adults should use the Rambler responsibly when taking children from one place to another in it. The Rambler has been designed with an average walking speed in mind. So, adjust your walking speed etc. to the skills of the children sitting in the Rambler.

Children who sit on the benches must be able to sit unaided (stable, and with their feet on the chassis beam). You should use the Rambler's children's seat for smaller children. Always use the safety harnesses, and only allow them to be taken off under adult supervision.

Before using the Rambler, please check that:

1. the front-wheel rims have been correctly positioned on the drum brake.
2. all (4) wheels have been attached correctly and firmly (they can't be pulled out of the axle).
3. all (4) star-shaped knobs have been tightened firmly (you can't tip the bench over).
4. the pullbar clamps have been firmly fastened (you can't pull the pullbar loose).
5. the wheels lock when using the handbrake and/or parking brake.
6. the safety harnesses and the children's seat have been attached properly.
7. you have read these instructions, and know which periodic maintenance is necessary.

**Important:** Never leave the Rambler unattended without taking measures to prevent it from moving away accidentally. The supplier excludes all liability for accidents resulting from the use of the Rambler in any other way than intended by it.